




Installation Instructions

rear performance bar NC

NC0-0961

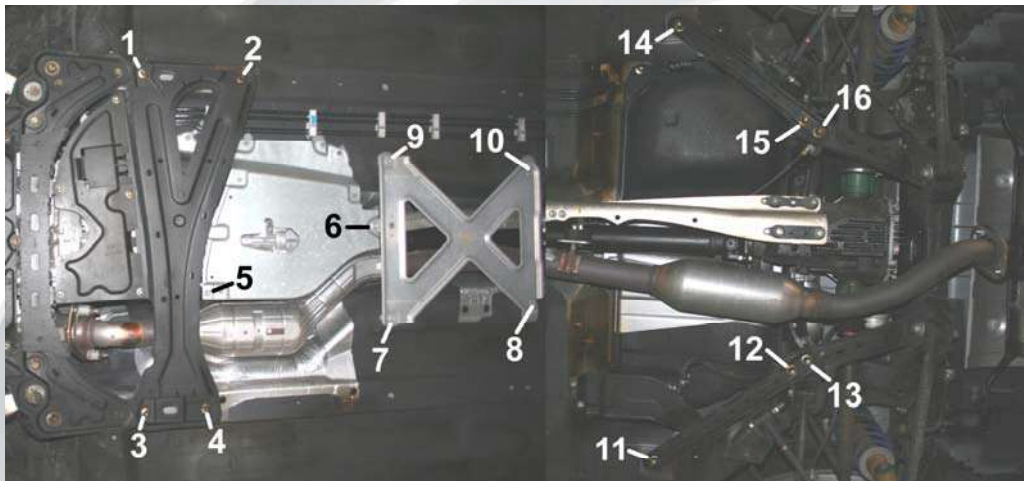

Picture 1


To install the rear performance bar, please loosen the frame rail reinforcement bar screws on positions 8 and, 10 then further loosen positions 11, 12, 14 and 15. (Picture 1)

Now take the rear performance bar and slide it under the rear section of the frame rail reinforcement bar (Picture 2) on positions 8 and 10. Now please install the rest of the rear performance bar by screwing in the OEM screws on positions 11, 12, 14 and 15.



Picture 2

Please check if all screws are tightened correctly by torque-ing them to the appropriate values. (check torque table)

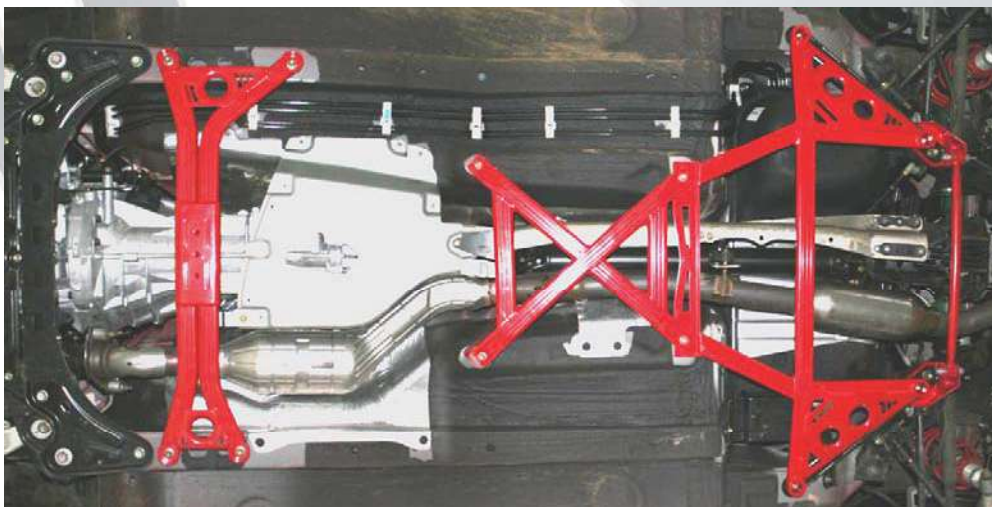

Picture 3

Torque values and positions:

8 → 17,7 – 26,5 Nm	12 → 17,7 - 26,5 Nm
10 → 17,7 – 26,5 Nm	14 → 17,7 - 26,5 Nm
11 → 17,7 - 26,5 Nm	5 → 17,7 - 26,5 Nm